 


Please follow the below instructions to update Magic-S Pro , thanks !

1. Download the software from <http://www.mayflash.com/Support/Download/> and install it on your Windows system.

MAGIC-S PRO Wireless Controller Adapter for Switch, PS4, PS3, PC, NEOGEO mini, PS Classic	April 23, 2020	V1.06 Compatible with SNK NEOGEO Arcade Stick PRO; Fix the bug that the Xbox One Controller updated to V4.8.1923.0 can't work.
--	----------------	--


2. The firmware is in rar.format , please unzip it to exe.format by using winzip software .and then double click on the updater (exe format) and leave the updater window open on your screen.

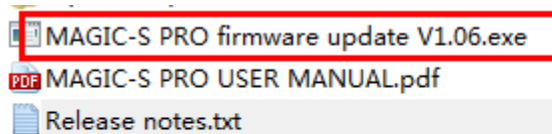


3. Plug Magic-s Pro to PC USB slot to check the mode . Please make sure your adapter is in the XINPUT mode (The LED indicator is in **Green**). If not in XINPUT mode, please switch to the XINPUT mode manually by pressing and holding the button located at the side of the adapter for 3-5 seconds.




4. Remove Magic-S Pro from PC and then press and hold the SYNC button on the side of the Magic-s Pro to re-plug into PC USB slot.
5. As soon as the Magic-S Pro has been recognized (LED indicator turns off) by updater, select "Update"

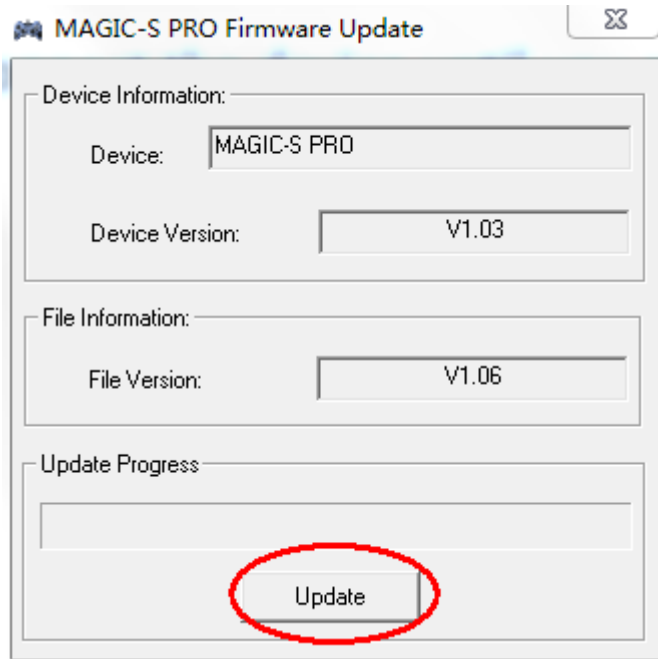

6. Wait seconds , it will be updated soon . (Noted : Do not disconnect the device until you are informed that the updated was completed successfully)

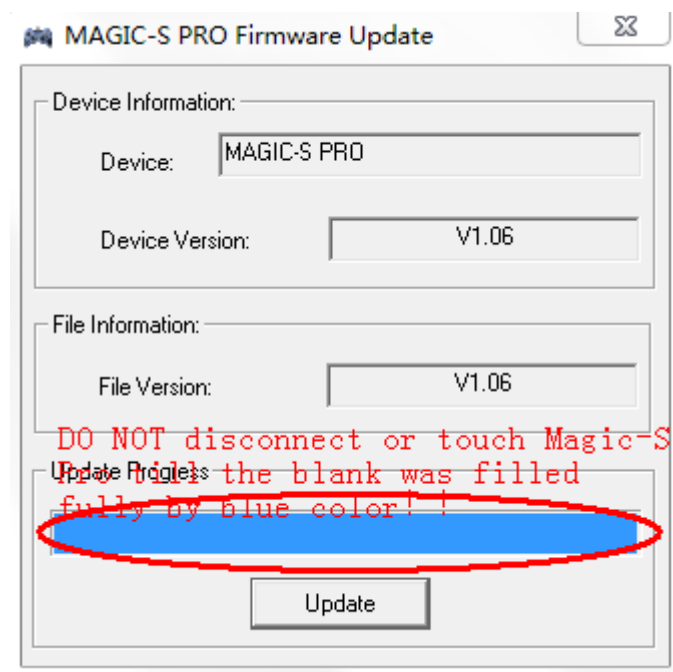

7. Next, click "ok"

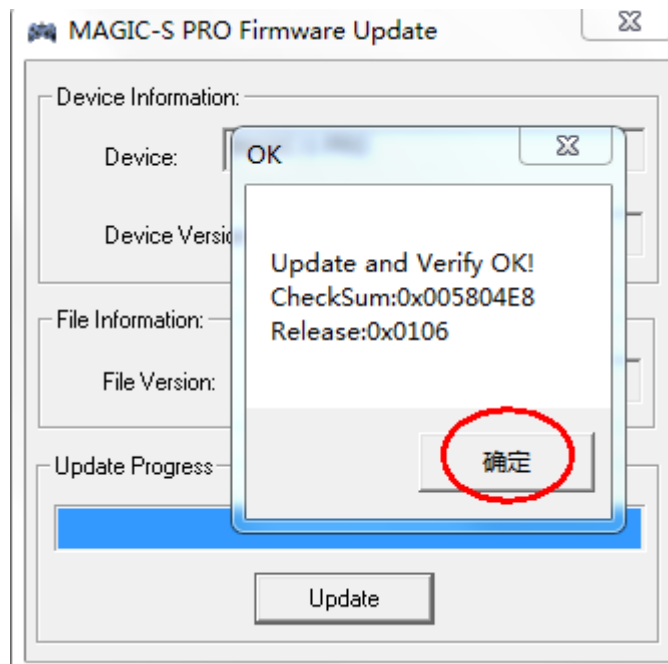

8. At last , it is in the newest version now !

